

FULL-KEY INDEPENDENT CUSTOMIZATION

Access LT Optical Travel Configuration setting by clicking 'Actuation Point' in the software.



